Installation, Operation & Maintenance Manual

AromaFlo

Fragrance Metering Pump System for Commercial Steam Rooms

IMPORTANT: Leave this material with the operator.

mr_steam[®] | Feel Good Inc.[®]

WARNING This installation, operation and maintenance manual is for general reference. The installation, operation and maintenance manual supplied with the product must be used for installation, operation and maintenance purposes. Failure to use the installation, operation and maintenance manual supplied may result in a property damage or personal injury.

TABLE OF CONTENTS

Installer's Section:

Operator's Section

Fragrances
Important Safety Information
Locating the AromaFlo and Caddy20
Pump Operation

BEFORE INSTALLING


Carefully inspect the AromaFlo pump and packaging for shipping damage. In the event of shipping damage, please contact the carrier for claim information. Our customer service department can assist you with product replacement. Read these instructions before installation or service. Although the AromaFlo pump has been fully qualified for shipment by MrSteam, the following must be reviewed for proper, safe and enjoyable steam bathing:

- **1.** Verify that the model and accessories specifications are correct for the application.
- **2.** The physical size of the unit, clearance for plumbing servicing, its distance from the steam room and fragrance location must all be considered before final installation.
- **3.** Consider any controls and accessories before initiating installation. Read the Installation and Operation Manual of all controls and accessories available at www.mrsteam.com technical downloads.

IMPORTANT NOTES:

This document contains important safety, operation and maintenance information. After installation leave this document with the operator. Do not discard this document.

The following general information should be used in conjunction with consultations with an architect, designer and contractor in determining factors necessary in providing a suitable and safe steam room. MrSteam AromaFlo pumps are intended to be operated with MrSteam CU commercial steam bath generators and are to be installed strictly in accordance with the specific instructions contained in this manual and as supplied in the manuals provided with the controls or accessories.

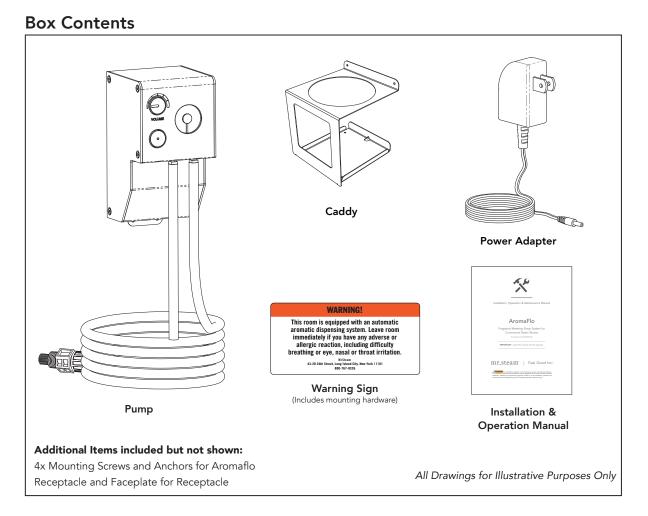

IMPORTANT NOTE: As you follow these instructions, you will notice warning and caution symbols. This blocked information is important for the safe and efficient installation and use of the AromaFlo, fragrance and AromaFlo. These are types of potential hazards that may occur during installation and operation:

States a hazard may cause serious injury or death if precautions are not followed.

CAUTION Signals a situation where minor injury or product damage may occur if you do not follow instructions.

IMPORTANT NOTE: This highlights information that is especially relevant to a problem-free installation.

All information in these instructions is based on the latest product information available at the time of publication. MrSteam reserves the right to make changes at any time without notice.

- Keep the AromaFlo and fragrance away from heat, sparks, electrical outlets, open flames such as candles and hot surfaces.
- No smoking.
- Keep Out of the Reach of Children.
- Use only non-sparking tools. Take precautionary measures against static discharge.
- Contains denatured ethyl alcohol
- In case of fire: Use CO2, dry chemical, alcohol foam, and water spray for extinction.
- Always store the MrSteam Aroma fragrances in a secure location. Keep container tightly closed and store in a cool, dry and well-ventilated place.

WARNING

- Avoid fragrance contact with eyes. May cause mild eye irritation. Ingestion may cause irritation, nausea, vomiting.
- Fragrance vapors may cause drowsiness, allergic reactions, difficulty breathing or skin irritation. If condition persists get medical attention.
- The Fragrance Safety Data Sheet provides comprehensive information about MrSteam Aroma fragrances. Contact 1-800-767-8326 or go online at www.mrsteam. com for a copy of the Safety Data Sheet.
- MrSteam fragrances (CU-EUCALYPTUS, CU-LAVENDER) are only for use with the MrSteam AromaFlo. Never use MrSteam fragrances in any other AromaFlo, spray or dispensing device. The use of MrSteam fragrances in any other device may cause personal injury.
- The use of any fragrances other than MrSteam fragrances with a MrSteam AromaFlo may introduce excessive concentration of fragrances into the steam room, resulting in personal injury.
- Keep out of the reach of children.

- Always install the supplied Check Valve. Failure to install the supplied Check Valve may result in excessive fragrance delivery into the steam room and cause dizziness and/or personal injury.
- The AromaFlo has been factory set to deliver a suitable amount of fragrance into a typical commercial room. Start with the AromaFlo volume at a very low setting. Gradually increase the volume setting until a comfortable fragrance level is reached. Do not exceed the "Recommended Setting" indicated on the AromaFlo volume.
- Do Not alter or modify any MrSteam product. Doing so may result in a personal injury.
- Never use an AromaFlo pump in a Residential or Day Spa installation. Doing so may result in excessive amount of fragrance and persoanal injury.
- Never locate the caddy near or on the steam boiler. Doing so may result in fire, property damage or personal injury.
- Install according to Local and National plumbing and electrical codes.

FIRST AID


IN CASE OF EYE CONTACT: Rinse the eyes immediately with plenty of water, also under the eyelids, for at least 15 minutes. If eye irritation persists: Get medical attention.

IN CASE OF SKIN CONTACT: Remove/Take off immediately all contaminated clothing. Rinse skin with soap and water or shower. If skin irritation persists, get medical attention.


IF SWALLOWED: Do not induce vomiting. Rinse mouth thoroughly with water. If conscious, give large amounts of water. If symptoms persist, call a physician.

Important Notes:

- Steam AromaFlo fragrances are only for use in commercial installations. Do Not use MrSteam fragrances in residential installations.
- Not for use in acrylic or fiberglass rooms. Check with the room manufacturer to determine compatibility of these fragrances with room construction materials.
- Do Not alter or modify any MrSteam product. Doing so will void the warranty.
- MrSteam Aroma fragrances must be disposed of as hazardous waste.

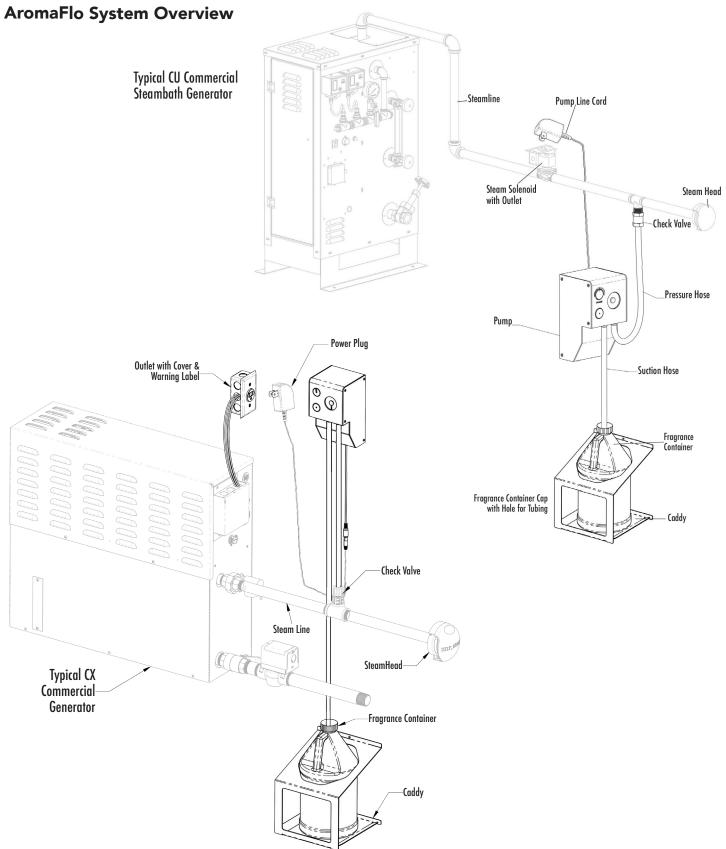

General System Dimensions

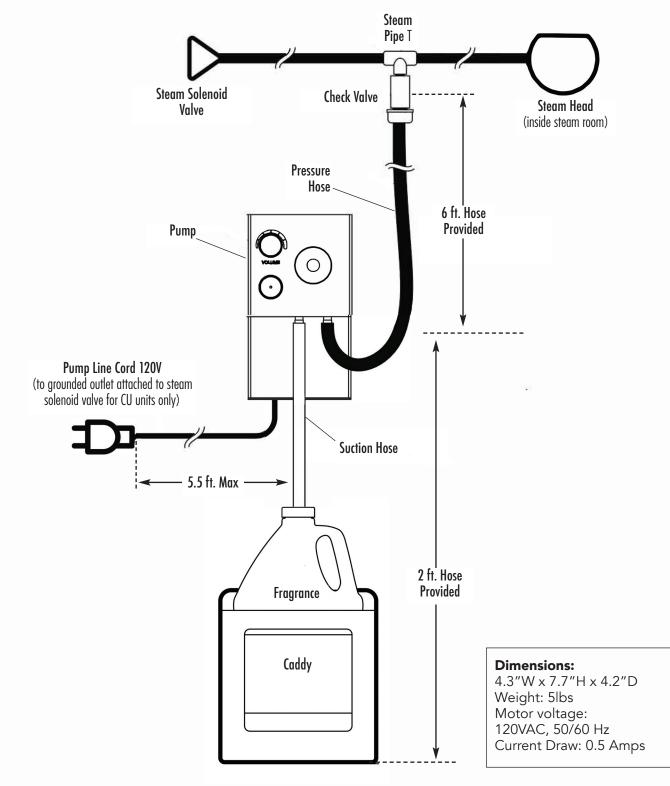

WARNING SIGN

The supplied warning sign shall be posted in a conspicuous location next to the steam room door.



AromaFlo Location & Installation

- **1.**Keep the AromaFlo away from heat, sparks, electrical outlets, open flames such as candles and hot surfaces.
- **2.**Locate the Fragrance and AromaFlo to monitor the consumption of fragrance and for easy replacement.
- **3.** The AromaFlo should not be installed in areas accessible to children. A locked room is strongly recommended (i.e. utility room)
- **4.** The AromaFlo is designed and intended for indoor use only and is to be located indoors in a dry clean location and not subject to moisture, condensation or similar high humidity environments.
- **5.**Do not install the AromaFlo outdoors.
- **6.**Do not install the AromaFlo in a location where water could freeze.
- 7. Do not install the AromaFlo near corrosive materials and chemicals. Installation in areas having high concentrations of chlorine (such as pool equipment room) should be avoided.
- 8. Attach the AromaFlo onto a secure vertical surface.
- **9.** Use only non-sparking tools. Take precautionary measures against static discharge.

Installing the AromaFlo

Box Contents:

- AromaFlo
- Pressure Hose
- Power Adapter
- Check Valve
- Mounting screws with Anchor (4)
- Instructions

Locating the AromaFlo:

1. Place in a location that allows visual monitoring of the fragrances level.

Tools required:

Level

• Cordless drill with a Phillips bit

• *Use only non-sparking tools.

against static discharge


Take precautionary measures


- **2.** Place in a location that allows for easy replacement of the fragrance container.
- **3.** The AromaFlo should not be installed in areas accessible to children. A locked room is strongly recommended (ie: utility room).
- 4. The AromaFlo must be installed in an upright orientation
- **5.** The AromaFlo is designed and intended for indoor use only. Do not install outdoors.
- **6.**Do not install in an unheated location where water could freeze.
- 7. Locate in a area where the ambient temperature does not exceed 88' F.

Mounting the AromaFlo on a Wall

- **1.**Use the two, mounting screws provided, drill into seleced wall, 2.52" apart, horizontally
- 2. Use a level to make sure the screws are level.
- **3.** Align both mounting eyelets on the back of the AromaFlo to the 2 screws already installed on selected wall. Place AromaFlo on selected wall and push down, so screw head of both screws are securely seated in the top portion of both mounting eyelets (Diagram 2).
- **4.** Use the two mounting screw provided to secure the AromaFlo using the two mounting hole at the middle of the AromaFlo (Diagram 3).
- **5.** Use anchors or other hardware as required for secure mounting. Test the AromaFlo for secure mounting.
- **6.**Connect the fragrance container to the AromaFlo according to instructions in the AromaFlo Fragrance Dispensing Installation.
- 7. Always keep the container in the AromaFlo caddy.

Using a fragrance container that is not secured in the AromaFlo, or using a AromaFlo that is not mounted may result in spillage, excessively strong vapors or a fire hazard.

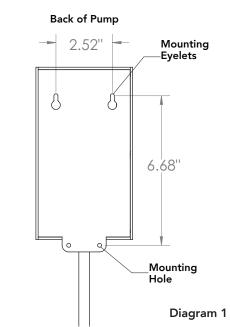

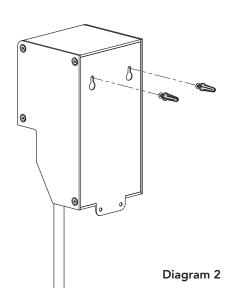


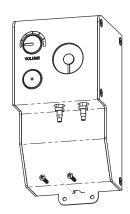


Diagram 3

All Drawings for Illustrative Purposes Only

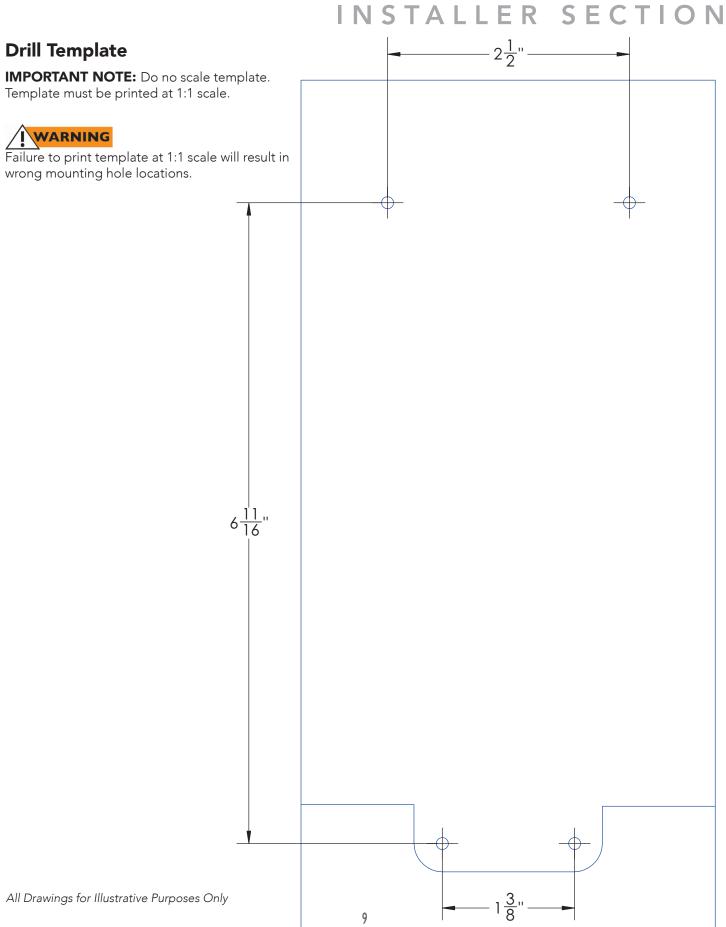

Installing the 90 degree T & Check Valve

 For optimal results locate a brass 90 degree T (not provided) in the steam supply line within 5-10 feet of the steam head. If using copper tubing for steam lines, install a female 1/2 NPT reducing Tee in the steam line.

IMPORTANT NOTE: Follow the installation instructions for the steam pipeline in the MrSteam Steam Bath Installation and Operation Manual. Visit www.mrsteam.com to download this document.

2. Install Check Valve into 90° T/adaptor.

WARNING The supplied Check Valve prevents excessive amounts of fragrance from entering the steam line and steam room. Never install the AromaFlo without the supplied Check Valve. Failure to install the supplied Check Valve may result in excessive fragrance delivery into the steam room and cause dizziness and/or personal injury.

Pressure Tube Assembly

For your convenience the pressure tube assembly is provided preassembled. If additional tubing is needed please contact MrSteam Technical service at 1-800-767-8326 or 1-800-727-8326.

Installation of Pressure Hose to the AromaFlo


- **1.** Press pressure hose onto barb fitting for pressure hose on the pump.
- **2.**Push pressure hose up until it has reached the square flat section on barb fitting.

IMPORTANT NOTE: To prevent connection from leaking, insert barb fitting completely into Pressure Hose until it reaches the flat. Lubricate the ID of Pressure Hose as required with soap to facilitate insertion.

Installation of Pressure Hose to Check Valve

- 1. Loosen Check Valve Tightening Nut from Check Valve.
- **2.** Install Check Valve Tightening Nut. Collar and Tube Holder onto Pressure Tube as shown.
- **3.** Hand tighten Check Valve Tightening Nut onto Check Valve.

IMPORTANT NOTE: To prevent damage do not use tools to tighten the nut.

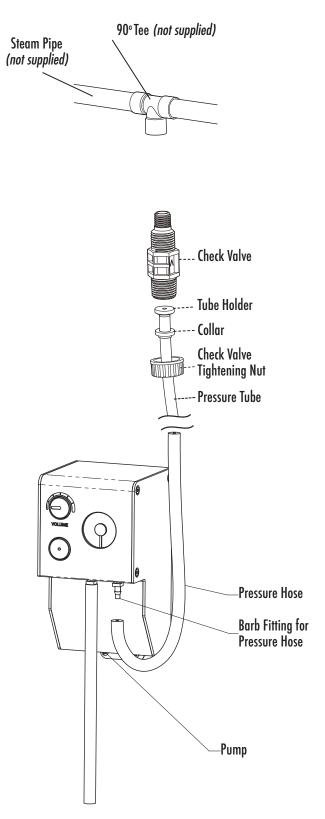

Installing the Caddy: Box Contents:

- Stainless steel caddy
- Mounting screws (2)
- Instructions

Tools required:

- Cordless drill with a Phillips bit
- level
- * Use only non-sparking tools. Take precautionary measures against static discharge


Locating the Caddy:

- 1. Place in a location that allows visual monitoring of the fragrances level.
- 2. Place in a location that allows for easy replacement of the fragrance container.
- 3. The caddy should not be installed in areas accessible to children. A locked room is strongly recommended (ie: utility room).
- 4. The maximm distance from the pump to the bottom of the caddy is 6 feet (Diagram 1).
- 5. The caddy is designed and intended for indoor use only. Do not install outdoors.
- 6. Do not install in an unheated location where water could freeze.
- 7. Locate in an area where the ambient temperature does not exceed 88° F.
- 8. Never locate the caddy near or on the steam boiler. Doing so may result in fire, property damage or personal injury.


Mounting the Caddy on a Wall:

- **1.** Use a level to make sure the caddy is level.
- 2. Use the two mounting screws provided to secure the caddy to a wall stud (Diagram 2).
- 3. The fragrance and caddy are heavy. Failure to mount the caddy to a wall stud in a secure manner may result in spillage, excessively strong vapors or a fire hazard.
- 4. Install the lower screw first into a wall stud. Leave about 1/8" of the screw sticking out above the surface. Lower the caddy onto the screw so the caddy bottom keyhole rests securely on the screw.
- 5. Mounting screws have been provided. However, as construction materials may vary, use other hardware (screws, anchors, etc.) as required for secure mounting. Test the caddy for secure mounting.

(Continue on next page)

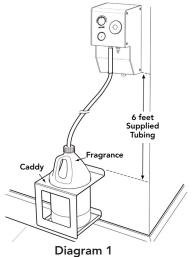

Drawing details removed for clarity

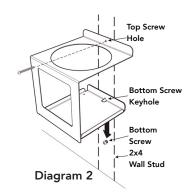

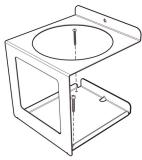


Diagram 3

Using a fragrance container that is not secured in the supplied caddy, or using a AromaFlo that is not mounted may result in spillage, excessively strong vapors or a fire hazard.

All Drawings for Illustrative Purposes Only

Mounting the Caddy on a Wall: (Cont)


- 6. Insert the fragrance container with the label facing outward so it is visible through the caddy window (Diagram 4). The label contains important information.
- **7.**Connect the fragrance container to the pump according to instructions on page 9 (Diagram 5).
- **8.** Always keep the container in the caddy while it is connected to the dispensing pump.

Mounting the Caddy on a Floor:

- 1. Use the two mounting screws provided to secure the caddy using the two holes at the bottom of the caddy (Diagram 3).
- 2. Mounting screws have been provided. However, as construction materi-als may vary, use other hardware (screws, anchors, etc.) as required for secure mounting. Test the caddy for secure mounting.
- **3.** Insert the fragrance container with the label facing outward in a manner it is visible through the caddy window (Diagram 4). The label contains important information.
- **4.**Connect the fragrance container according to instructions on page 9 (Diagram 5).
- **5.** Always keep the container in the caddy while it is connected to the dis-pensing pump.



Diagram 4

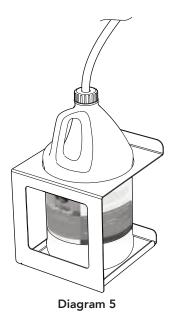

Using a fragrance container that is not secured in the supplied caddy, or using a AromaFlo that is not mounted may result in spillage, excessively strong vapors or a fire hazard.

Suction Hose Assembly

For your convenience the suction hose is provided preassembled. If additional tubing is needed please contact MrSteam Technical service at 1-800-767-8326 or 1-800-727-8326.

IMPORTANT NOTE: HAND-TIGHTEN ONLY.

Installation of Suction Hose into the Fragrance Container


- **1.**Locate the "container cap" with the hole included with the bottle of fragrance.
- **2.** Insert the suction hose through the hole in the container cap.
- **3.** Unscrew the cap from the fragrance container and discard.
- **4.**Screw the container cap onto the fragrance container.
- **5.** Place the fragrance container into caddy's open cavity, ensure bottom of the fragrance container is securely seated on the bottom of the caddy.

IMPORTANT NOTE: To prevent damage, do not use tools to tighten the container cap.

Priming the AromaFlo

- 1. Ensure MrSteam fragrance container is full
- **2.** Press and hold the priming button until liquid fills tubing in AromaFlo pump head, or MrSteam fragrance is detected in steam room.
- **3.** If liquid is not filling tubing in AromaFlo pump head, release priming button and check if suction hose is securely installed onto barb fitting below AromaFlo pump head and check valve.
- **4.** Repeat steps until the hose in AromaFlo pump head is fulled or MrSteam is detected in steam room.


IMPORTANT NOTE: If an extended pressure hose is special ordered then contact MrSteam Technical Service (see page 20) for instructions for filling the pressure hose with fragrance.

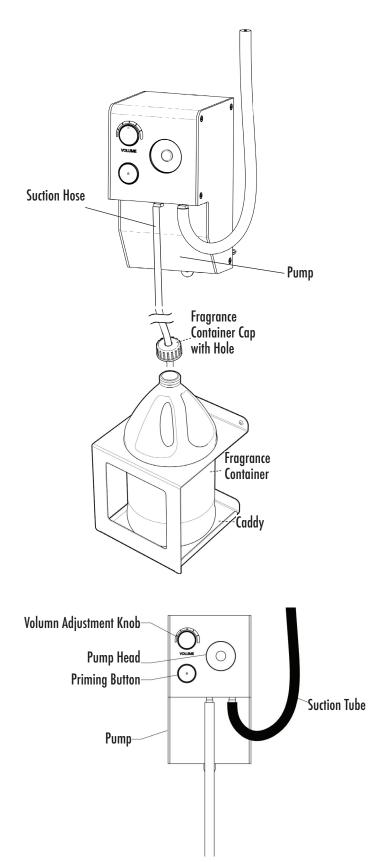

All Drawings for Illustrative Purposes Only

Electrical Connection of Metering Pump to CU Generator


CAUTION AromaFlo system is factory wired. If the power cord of the AromaFlo pump is damaged it must be replaced by the MrSteam service depart-ment or similarly qualified personnel in order to avoid an electric shock hazard. All electrical connections to be made by a licensed, qualified electrician. Disconnect all power to the steam generator before making power connections.

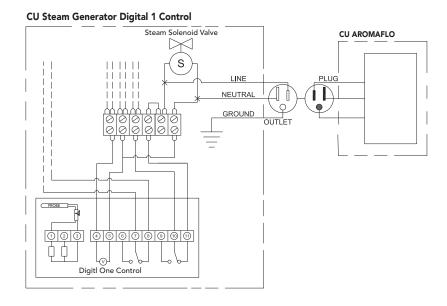


Electrical Box Assembly

CAUTION To avoid possible electric shock, the AromaFlo pump must be suitably grounded according to National Electric and local Codes. Disconnect all power supplies before proceeding. Such wiring should be done by a licensed electrician.

NOTE: Refer to the wiring diagram above for all wiring connections

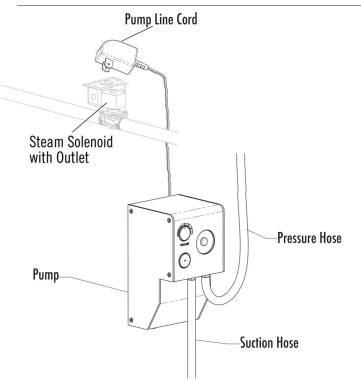

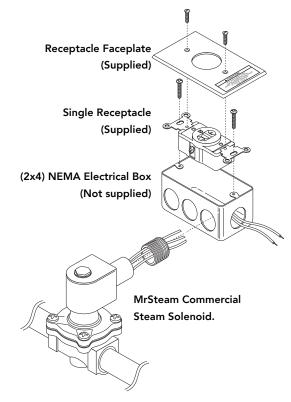


Fully Assembled

CAUTION The electrical outlet shown is for AromaFlo Pump connection only. Make no other connections to this outlet. Other connections may result in circuit overload

All Drawings for Illustrative Purposes Only

Electrical Connection of Metering Pump to CX Generator

CAUTION AromaFlo system is factory wired. If the power cord of the AromaFlo pump is damaged it must be replaced by the MrSteam service depart-ment or similarly qualified personnel in order to avoid an electric shock hazard. All electrical connections to be made by a licensed, qualified electrician. Disconnect all power to the steam generator before making power connections.

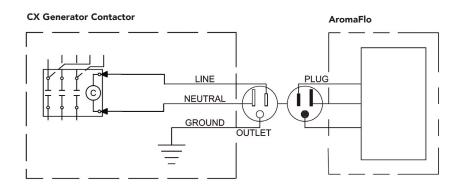

Electrical Box Assembly


CAUTION To avoid possible electric shock, the AromaFlo pump must be suitably grounded according to National Electric and local Codes. Disconnect all power supplies before proceeding. Such wiring should be done by a licensed electrician.

NOTE: Refer to the wiring diagram above for all wiring connections

(2x4) NEMA Electrical Box (Not supplied)

Receptacle Faceplate (Supplied)

> Single Receptacle (Supplied)

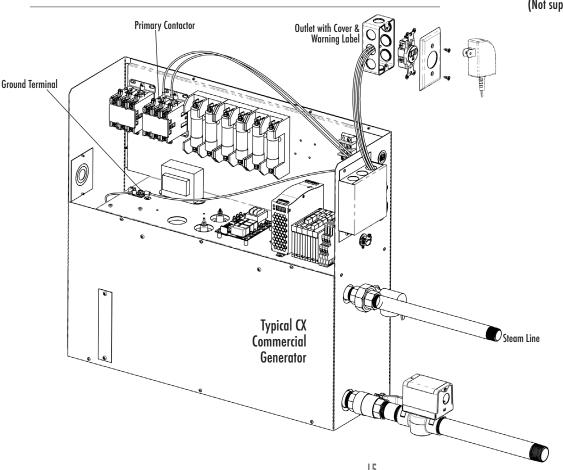

To CX Generator, see wiring diagram

Fully Assembled

I CAUTION The

electrical outlet shown is for AromaFlo Pump connection only. Make no other connections to this outlet. Other connections may result in circuit overload

IMPORTANT NOTE:

This step only needs to be performed during installation. **1.**The AromaFlo needs to be connected to a power

- source before it can be used.
- **2.**LED Light will illuminate when pump is connected to a power source.

Adjusting the Amount of Fragrance Delivery

The AromaFlo system has been factory set to deliver a suitable amount of aromatic fragrance into a typical sized steam room. Do not exceed the maximum setting. Please contact the MrSteam Technical Service Department before changing this setting.

Contact the MrSteam Technical Service Dept. at (800) 76-STEAM (East coast) or (800) 72-STEAM (West Coast) for assistance or additional information.

WARNING Increasing the settings may introduce excessive concentration of fragrance into the steam room, resulting in a health hazard.

TROUBLESHOOTING


WARNING TO AVOID ELECTRIC SHOCK, DISCONECT POWER TO PUMP BEFORE SERVICING

Pump does not prime

- **1.**Check if voltage is available.
- **2.**Check liquid level in fragrance container. Replenish liquid, if necessary.
- **3.** Check for air bubbles in the suction tube or the pump head. To eliminate air bubbles see: Priming Pump.
- **4.** Check valves for contamination. Clean valves if necessary.

Pump does not inject fragrance into steam room

- **1.**Check if voltage is available.
- **2.**Check liquid level in fragrance container. Replenish fragrance if necessary.
- **3.** Check for air bubbles in the suction tube or the pump head. To eliminate air bubbles see: Priming Pump.
- **4.** Check valves for contamination. Clean valves if necessary.
- **5.**Check the pressure tube for kinking or jamming. Straighten or replace.
- 6. Check if fragrance is freely flowing through the Check Valve when the metering pump is energized. Apply compressed air through the Check Valve. Attach the compressed air at the point of connection of the pressure tube.

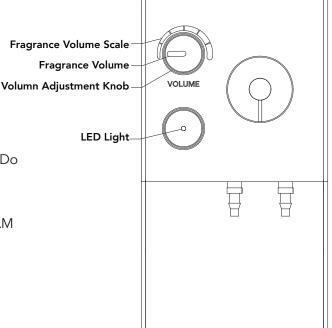


Pump fragrance delivery too much or too little

WARNING The AromaFlo system has been factory set to deliver a suitable amount of aromatic fragrance into a typical sized steam room. Please contact the MrSteam Technical Service Department before changing this setting. See page 12 for instructions on adjusting the amount of fragrance delivery.

Contact the MrSteam Technical Service Dept. at (800) 76-STEAM (East coast) or (800) 72-STEAM (West Coast) for assistance or additional information.

AromaFlo pumps are connected to 120V line voltage and contain live electrical components. All installation and service to be performed by qualified and licensed electricians and plumbers only. Installation or service by unqualified persons or failure to use MrSteam parts may result in property damage or in a hazardous condition.

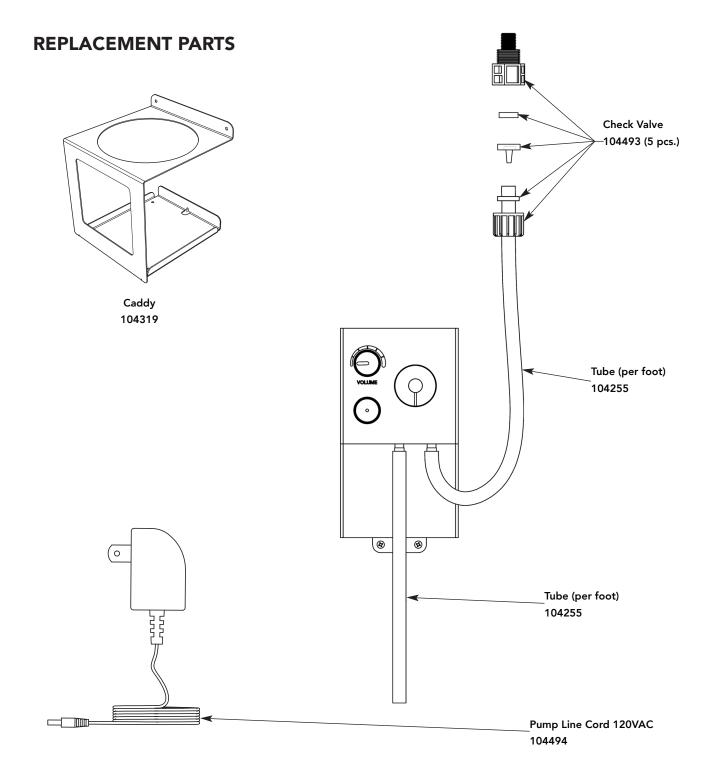

OPERATOR SECTION



MrSteam AromaFlo Fragrances

THE AROMAFLO SYSTEM FRAGRANCE DISPENSING PUMP

The AromaFlo's state-of-the-art pump introduces fragrance into the steam pipe and into a commercial steam room.

MrSteam Fragrance is Available in Two Fragrances:

FRAGRANCE PART NO. CONTAINER VOLUME.

Eucalyptus CU-EUCALYPTUS 1 Gallon A deeply refreshing aroma with cleansing effects, eucalyptus may help open air passageways.

Lavender CU-LAVENDER 1 Gallon A sweet, lightly floral scent, lavender may help soothe anxiety with its calming and restorative properties.

The Safety Data Sheet provides comprehensive information about MrSteam AromaFlo fragrances. Contact 1-800-767-8326 or go online at www.mrsteam.com for a copy of the Safety Data Sheet.

READ ME FIRST!

IMPORTANT NOTE: As you follow these instructions, you will notice warning and caution symbols. This blocked information is important for the safe and efficient installation and use of the fragrance and caddy. These are types of potential hazards that may occur during installation and operation:

WARNING States a hazard may cause serious injury or death if precautions are not followed.

CAUTION Signals a situation where minor injury or product damage may occur if you do not follow instructions.

IMPORTANT NOTE: This highlights information that is especially relevant to a problem-free installation.

OPERATOR SECTION

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS

WARNING

FLAMMABLE LIQUID AND VAPOR

- Keep the AromaFlo and fragrance away from heat, sparks, electrical outlets, open flames such as candles and hot surfaces.
- No smoking.
- Keep Out of the Reach of Children.measures against static discharge.
- Contains denatured ethyl alcohol.
- In case of fire: Use CO2, dry chemical, alcohol foam, and water spray for extinction.
- Always store the MrSteam Aroma fragrances in a secure location. Keep container tightly closed and store in a cool, dry and well-ventilated place.

I WARNING

- Avoid fragrance contact with eyes. May cause mild eye irritation. Ingestion may cause irritation, nausea, vomiting.
- Fragrance vapors may cause drowsiness, allergic reactions, difficulty breathing or skin irritation. If condition persists get medical attention.
- The Fragrance Safety Data Sheet provides comprehensive information about MrSteam Aroma fragrances. Contact 1-800-767-8326 or go online at www.mrsteam. com for a copy of the Safety Data Sheet.
- MrSteam fragrances (MS OIL 1-5) are only for use with the MrSteam AromaFlo (part number MS AROMA and MS AROMAC). Never use MrSteam fragrances in any other AromaFlo, spray or dispensing device. The use of MrSteam fragrances in any other device may cause personal injury.

- The use of any fragrances other than MrSteam fragrances with a MrSteam AromaFlo may introduce excessive concentration of fragrances into the steam room, resulting in personal injury.
- Keep out of the reach of children.
- The AromaFlo has been factory set to deliver a suitable amount of fragrance into a typical sized residential or Day Spa steam room. Start with the AromaFlo volume at a very low setting. Gradually increase the volume setting until a comfortable fragrance level is reached. Do not exceed the "Recommended Setting" indicated on the AromaFlo volume.
- Do Not alter or modify any MrSteam product. Doing so may result in a personal injury.

FIRST AID

IN CASE OF EYE CONTACT: Rinse the eyes immediately with plenty of water, also under the eyelids, for at least 15 minutes. If eye irritation persists: Get medical attention.

IN CASE OF SKIN CONTACT: Remove/Take off immediately all contaminated clothing. Rinse skin with soap and water or shower. If skin irritation persists, get medical attention.

IF SWALLOWED: Do not induce vomiting. Rinse mouth thoroughly with water. If conscious, give large amounts of water. If symptoms persist, call a physician.

Important Notes:

- Not for use in acrylic or fiberglass rooms. Check with the room manufacturer to determine compatibility of these fragrances with room construction materials.
- Do Not alter or modify any MrSteam product. Doing so will void the warranty.
- MrSteam Aroma fragrances must be disposed of as hazardous waste.

OPERATOR SECTION

Locating the AromaFlo/Fragrance:

- 1. Place in a location that allows visual monitoring of the fragrances level.
- 2. The AromaFlo should not be installed in areas accessible to children. A locked room is strongly recommended (ie: utility room).
- **3.**The AromaFlo is designed and intended for indoor use only. Do not install outdoors.
- 4. Do not install in an unheated location where water could freeze.
- 5. Locate in a area where the ambient temperature does not exceed 88° F.

Using a fragrance container that is not secured in the supplied caddy, or using a AromaFlo that is not mounted may result in spillage, excessively strong vapors or a fire hazard.

IMPORTANT NOTE:

This step only needs to be performed during installation.


- **1.**The AromaFlo needs to be connected to a power source before it can be used.
- 2.LED Light will illuminate when pump is connected to a power source."


Adjusting the Amount of Fragrance Delivery

The AromaFlo system has been factory set to deliver a suitable amount of aromatic fragrance into a typical sized steam room. Do not exceed the maximum setting. Please contact the MrSteam Technical Service Department before changing this setting.

Contact the MrSteam Technical Service Dept. at (800) 76-STEAM (East coast) or (800) 72-STEAM (West Coast) for assistance or additional information.

WARNING Increasing the settings may introduce excessive concentration of fragrance into the steam room, resulting in a health hazard.

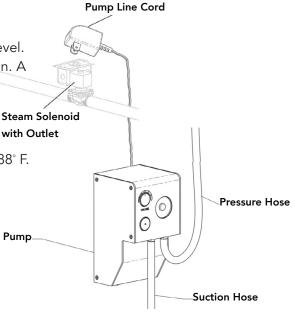

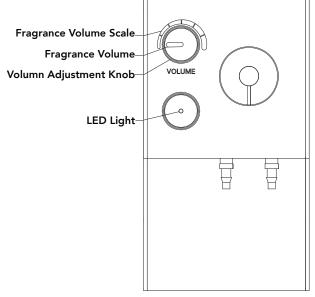

All Drawings for Illustrative Purposes Only

www.mrsteam.com

Products, information and specifications are subject to change without notice. Please call Technical Support at 1.800.76.STEAM (East Coast) or 1.800.72.STEAM (West Coast) for more information. The model and serial number is printed on the data plate on the front of the steam bath generator. Have this information available when contacting Technical Service.

mr. steam hello@mrsteam.com | www.mrsteam.com 43-20 34th Street, Long Island City, NY | | | 0 | TEL: | 800 76 STEAM | 9410 S. La Cienega Blvd. Inglewood CA 9030 | TEL: | 800 72 STEAM

2020[®] MrSteam and des., A Lifetime of Pleasure, AirTempo, AromaFlo, AudioWizard, AutoFlush, AutoSteam, Butler Package, ChromaSteam, Clean Steam...Every Time, Club Therapy, CT Day Spa, Digital 1, Express Steam, Feel Good Inc., From Bathroom to Spa, HomeWizard, iButler, iGenie, iSpa Package, iSteam, iTempo, iTempo/Plus, Linear Steamhead, Making Wellness a Way of Life, Music Therapy, My Steam, SmartSizing, Spa Package, Steam Genie, Steam on Demand, Steam in a Box, Steam@Home, SteamStart, SteamTherapy,Tala,Tala Bath & Body,Tempo,The Intelligent Steambath,Valet Package, and Virtual Spa System are registered trademarks of MrStream.