

# 30-Minute Digital Room Timer

**FEATURES:** The countdown timer uses a relay to switch the steam solenoid on. During the preset running time, the relay energizes and activates the connected steam solenoid by closing a circuit. After the time has elapsed, the relay deenergizes and deactivates the connected steam solenoid by opening the circuit again. THE TIMER MAY ONLY BE OPERATED AFTER INSTALLATION IN A PROTECTIVE HOUSING.

**INSTALLATION & LOCATION**

This timer may only be installed by a qualified, licensed electrician and must be installed in accordance with National and local codes.



**! WARNING SHOCK HAZARD!** Install the timer per the Digital 30-Minute Timer Installation and Operating Manual, PUR 100383, before connecting to the main supply. Never touch live contacts or components.

**! WARNING** DO NOT install the timer in a wet or damp location.

**! WARNING** DO NOT install the timer inside the steam room.

**IMPORTANT:** A steam vent (PN 104072) must be installed in the steam line between the steam generator and the steam solenoid valve when using a 30 minute timer. The steam vent will release hydrostatic pressure in the boiler while filling when the 30 minute timer has timed out.

**! WARNING** Make sure the boiler and pipes are not hot and have no pressure before installing the steam vent.

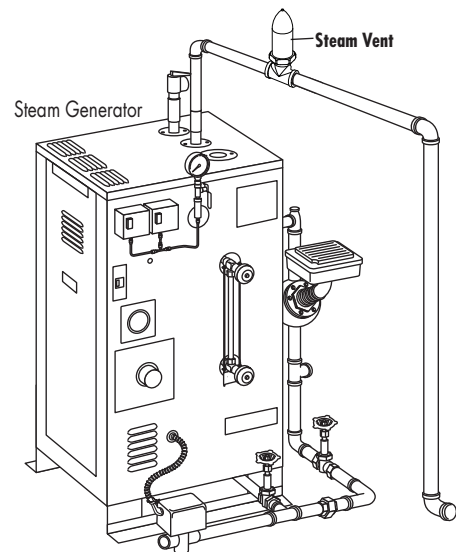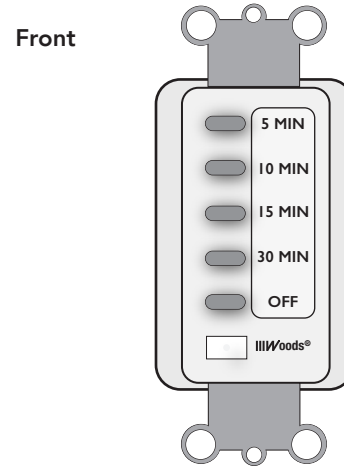

**FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit [mrsteam.com](http://mrsteam.com) before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

| MODEL  | PROJECT INFORMATION |               |
|--------|---------------------|---------------|
| 104552 | Location:           | Contractor:   |
|        | Architect:          | Submitted By: |
|        | Engineer:           | Date:         |
| Notes: |                     |               |