# AirButler Package

# MS AirButler Package

For models MS90 to MSSUPER3

### **BOX CONTENT**

- AirTempo®
- AromaSteam Steamhead
- AutoFlush® System
- SteamLinx Module & Mobile App
- Condensation Pan



For models MX4, MX5 and MX6 Same as AirButler Package except with a MAX AutoFlush, MAX Condensation Pan, and additional Steamhead.

**NOTE:** When ordered with the Linear Steamhead, standard steamhead(s) are replaced with 104480 Linear Steamhead(s)







FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	COLOR	FINISH	PROJECT INFORMATION
☐ MSABUTLER	☐ B Black	PC - Polished Chrome	Location:
☐ MAXABUTLER	☐ W White	BN - Brushed Nickel	Architect:
		PN - Polished Nickel	Engineer:
		ORB - Oil Rubbed Bronze	Contractor:
		BB - Brushed Bronze	
OPTIONS:  Linear Steamhead		PB - Polished Brass	Submitted By:
		SB - Satin Brass	Date:
Notes:			

# mr.steam<sup>®</sup>

### TECHNICAL SPECIFICATIONS

# AirTempo® Controls

True wireless control. A "nomadic" way to control your steam, whether installed on a wall or easily positioned on your bathroom vanity. Simply peel & stick for tool-free installation. It can even be attached to a glass shower wall.

### **AirTempo Control Features:**

- Wall mounted, battery powered wireless control
- LCD display
- Capacitive touch panel
- 60 foot range from generator
- Programmable temperature
- AromaSteam Steamhead in matching finish
- RF transceiver
- Flush mount or surface mount options
- 100% waterproof electronic assembly
- Compatibility with SteamLinx<sup>™</sup>
- Powered by two CR2450 coin cell batteries (included)

The AirTempo controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 feet above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the steamhead or direct steam emissions.
- on a vertical wall


The communication range of the control is 60 feet, the wireless receiver can be moved closer to the steam room by using a longer cable if the generator is more than 60 feet from the steam room or if construction materials impede the wireless signal.

If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.


### **Box Contents:**

- AirTempo
- Steamhead
- Tube of Silicone Sealant
- Owner's Manual
- Wireless Receiver
- Batteries
- Control Cable (3 ft.) Mounting Hardware

### **Dimensions for the Surface Mount Control:**

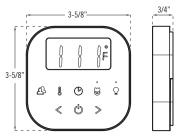

### **Dimensions for the Flush Mount Control:**

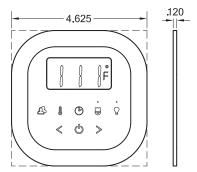

### FOR ILLUSTRATIVE PURPOSES ONLY. **IMPORTANT NOTE: FOR SAFE AND TROUBLE**

FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	MOUNTING STYLE	FINISH	PROJECT INFORMATION
AirTempo	Surface Mount	PC - Polished Chrome	Location:
	Flush Mount	BN - Brushed Nickel	Architect:
	Square*	PB - Polished Brass	Engineer:
	Flush Mount Round*	SB - Satin Brass	
	Round	BB - Brushed Bronze	Contractor:
	*The flush mount kit is sold separately 104232RD or 104232SQ	PN - Polished Nickel	Submitted By:
		ORB - Oil Rubbed Bronze	Date:
Notes:	1		-

# AutoFlush®


### **Box Contents**

- AutoFlush Valve with Cord
- Installation instructions

### **Operation**

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

**Note:** If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

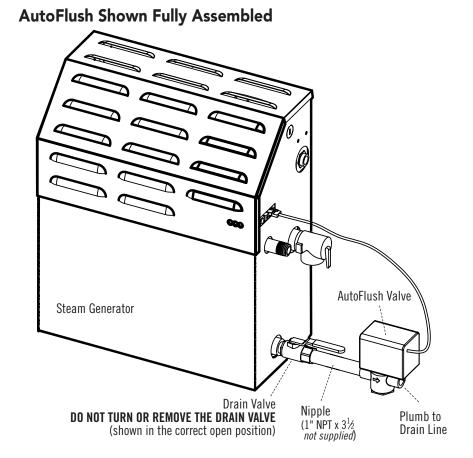

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
MS 81500E	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		


# Condensation Pan


103867 & 104402

Mr.Steam strongly recommends the use of a condensation pan in the unlikely event of a plumbing leak.

Locate the condensation pan on a solid level surface and place the steam generator inside the condensation pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Condensation pans drain by gravity. The condensation pan is equipped with an integral 3/4" NPT fitting.

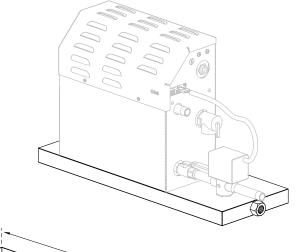

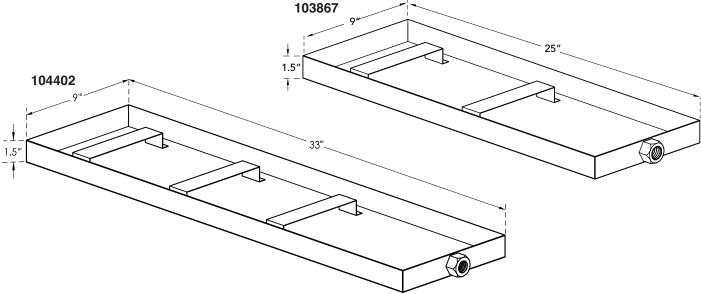

NOTE: For MX4E, MX5E and MX6E

use model 104402


**FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION		
☐ 103867 ☐ 104402	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	
Notes:			

Round 103937, Square 104040, 104104

AromaSteam Steamhead

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

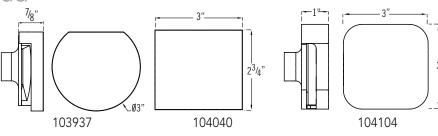

### Round & Square Steamhead Installation (½" NPT)

**IMPORTANT:** Do not disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.


**CAUTION** Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

**NOTE:** A 1.5" clearance hole around the steam pipe is needed to mount the steamhead.

Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938/10398SQ

**IMPORTANT NOTE:** To preserve steamhead finish, do not use wrench or other tools to tighten. DO NOT use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

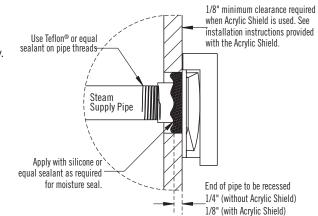

**CAUTION** Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938 / 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

<u>FOR ILLUSTRATIVE PURPOSES ONLY.</u> IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH**	PROJECT INFORMATION
103937-Round	BB Brushed Bronze	Location:
104040-Square	BN Brushed Nickel	Architect:
<u>104104*</u>	ORB Oil Rubbed Bronze	Engineer:
	☐ PB Polished Brass	Contractor:
	SB Satin Brass	
	PC Polished Chrome	Submitted By:
	PN Polished Nickel	Date:
	BLK Black***	Notes:
	☐ WH White***	
	MB Matte Black	
	RAW Custom Plating	

<sup>\* 104104</sup> Steamhead is used for AirTempo, iSteam and black/white facia iTempo and iTempoPlus.

<sup>\*\*</sup> For AirTempo select black or white with a decorative finish

<sup>\*\*\*</sup>iSteam, black/white fascia iTempo and iTempoPlus are provided with matching glass face and chrome trim only.

# SteamLinx™

### **BOX CONTENT**

- SteamLinx Generator Module
- SteamLinx Router Module
- 6 foot Ethernet Cord
- Power Adapter


### **SteamLinx**

Introducing the latest Mobile Steam Room Technology, the SteamLinx Mobile System. SteamLinx allows for seamless control of essential steam room functionality using your smart phone or mobile device.

Included in all Dream & Butler Packages.

Works will all MrSteam Controls

App available for download from Google Play and the App Store

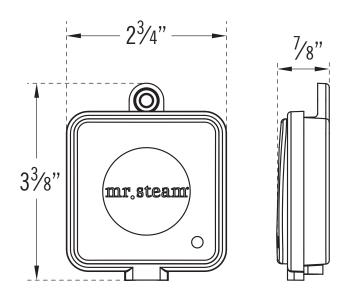



### FOR ILLUSTRATIVE PURPOSES ONLY.

**IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION		
SteamLinx	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	

104216

Linear Steamhead

- Quiet, even distribution of steam
- No field assembly required
- No moving parts
- Minimal profile

### **Linear Steamhead Installation**

(3/4" NPT)


**IMPORTANT:** Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly.


Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.

# Round Mounting Holes Slotted Mounting Holes To a street of the street

### CAUTIONS

- Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.
- Linear Steam Head model 104216 is suitable for MrSteam generator models MS90–400, MSSUPER1–3 and CT6-CT15.
- Two 104216 linear steamheads must be used for models MX4, 5 & 6.
- Using model 104216 for any steam generator model larger than the MSSUPER3, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
- For residential and Day Spa use only.
- Install in a horizontal orientation only.
   Installation in a vertical orientation may concentrate the steam and result in excessive temperatures.

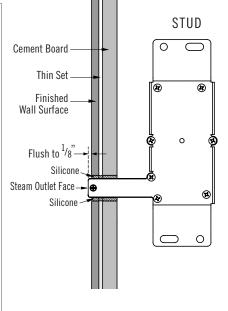

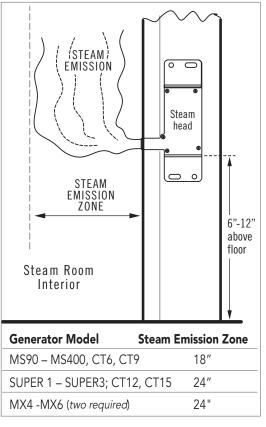

# FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
104216 For MS90 - MSSUPER3	Location:	Contractor:
and CT6-CT15  Two required for MX4, MX5 and MX6.	Architect:	Submitted By:
into required for mixty, mixto and mixto.	Engineer:	Date:
Notes:		

TS0067-1 REV 2.19