



Installation, Operation & Maintenance Manual

SpaNet Hub

IMPORTANT: Leave this Material with the Home Owner

mr.steam® | Feel Good Inc.

READ ME FIRST!

! WARNING As you follow these instructions, you will notice warning and caution symbols. This blocked information is important for the safe and efficient installation and operation of this generator. These are types of potential hazards that may occur during installation and operation:

! WARNING Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

! CAUTION Indicates a potentially hazardous situation, which, if not avoided may result in minor or moderate injury or product damage.

NOTICE is used to address practices not related to physical injury.

IMPORTANT NOTE: This highlights information that is especially relevant to a problem-free installation.

All information in these instructions is based on the latest product information available at the time of publication. MrSteam reserves the right to make changes at any time without notice. More current instructions may be available at www.mrsteam.com.

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

IMPORTANT SAFETY INSTRUCTIONS

1. READ AND FOLLOW ALL INSTRUCTIONS

2. ! WARNING
Supervise children at all times.

3. ! WARNING Steam is hot and can cause injury or death if improperly used. Steam rooms contain steam and elevated temperatures. Please read and observe all warnings in this manual before installing or using a steam room.

4. ! WARNING
To reduce the risk of injury:
A. The wet surfaces of steam enclosures may be slippery. Use care when entering or leaving.
B. The steam head is hot. DO NOT touch the steam head and avoid the steam near the steam head.
C. Prolonged use of the steam system can raise excessively the internal human body temperature and impair the body's ability to regulate its internal temperature (hyperthermia). Limit your

use of steam to 10-15 minutes until you are certain of your body's reaction.

D. Excessive temperatures have a high potential for causing fetal damage during the early months of pregnancy. Pregnancy or possibly pregnant women should consult a physician regarding correct exposure.

E. Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a steambath.

F. Persons using medication should consult a physician before using a steambath since some medication may induce drowsiness while other medications may affect heart rate, blood pressure and circulation.

SAVE THESE INSTRUCTIONS

! WARNING

REDUCE THE RISK OF OVERHEATING AND SCALDING

1. EXIT IMMEDIATELY IF UNCOMFORTABLE, DIZZY OR SLEEPY. STAYING TOO LONG IN A HEATED AREA IS CAPABLE OF CAUSING OVERHEATING.
2. SUPERVISE CHILDREN AT ALL TIMES.
3. CHECK WITH A DOCTOR BEFORE USE IF PREGNANT, DIABETIC, IN POOR HEALTH OR UNDER MEDICAL CARE.
4. BREATHING HEATED AIR IN CONJUNCTION WITH CONSUMPTION OF ALCOHOL, DRUGS, OR MEDICATION IS CAPABLE OF CAUSING UNCONSCIOUSNESS.
5. DO NOT CONTACT STEAM HEAD OR STEAM AT THE STEAM HEAD.

REDUCE THE RISK OF SLIPPING AND FALL INJURY

1. USE CARE WHEN ENTERING OR EXITING THE STEAM ROOM. FLOOR MAY BE SLIPPERY

NOTE: FOR ADDITIONAL SAFETY CONSIDERATIONS SEE OWNER'S MANUAL WHICH IS KEPT: _____

THE OWNER'S MANUAL CAN BE FOUND AT WWW.MRSTEAM.COM

USE OF STEAM ROOM IN CONJUNCTION WITH CONSUMPTION OF ALCOHOL CAN BE DANGEROUS AND CAN RESULT IN INJURY THROUGH SLIP AND FALL OR OTHERWISE.

mr.steam 43-20 34th Street, Long Island City, NY 11101 • 1 800 76 STEAM • www.mrsteam.com

HYPERTHERMIA occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°
F. The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia include:

- a) Failure to perceive heat;
- b) Failure to recognize the need to exit the steambath;
- c) Unawareness of impending risk;
- d) Fetal damage in pregnant women;
- e) Physical inability to exit the steambath and
- f) Unconsciousness.

! WARNING The use of alcohol, drugs, or medication can greatly increase the risk of hyperthermia.

! WARNING

This peel and stick warning label is an essential part of providing a safe environment for steam room users. This peel and stick warning label must be applied to the wall of the shower or steam enclosure, at a point that is visible to all users. Failure to install this sticker may result in serious injury or death. The location where this owner's manual is kept shall be written in the space provided on the label using permanent ink.


SpaHet Hub

INSTALLATION, OPERATION & MAINTENANCE MANUAL


Table of Contents

SpaNet Hub Box contents	1
General Installation	2
Installing the SpaNet Hub	3
Wiring the SpaNet Hub	4
Connecting SpaNet Hub to the iSteamX	5
Operating SpaNet Hub	6-7

SpaNet Hub Box Contents:

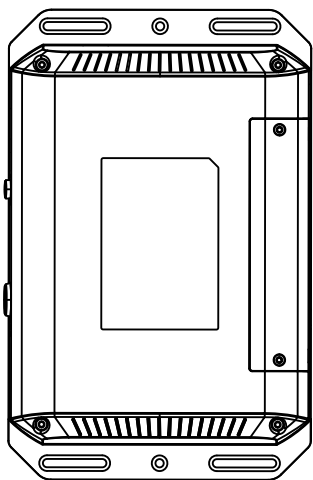

SpaNet Hub

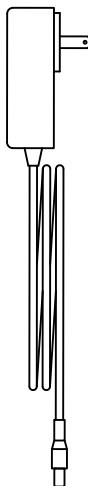 

Power Supply



**Supply
Accessory
Communication
Cable (30 ft)**

Not to Scale: All Drawings are for illustrative purposes only.


PUR 100591 REV 5.25

General Installation

The figure below shows how the SpaNet hub and iSteamX system interconnect with each other and the steam generator.


IMPORTANT NOTES:

- The included accessory communication cable is 30 feet long. Ensure that the SpaNet Hub and iSteamX Hub are located accordingly. Contact MrSteam to purchase an optional 60 foot communication cable (104542-60).
- SpaNet Hub replaces the need for a wall switch, SpaNet Hub will only switch power supplied to it, SpaNet Hub does NOT supply power.
- The maximum current each output of SpaNet Hub is 15A @ 120VAC.
- SpaNet Hub allows for control of 4 individual outlets.

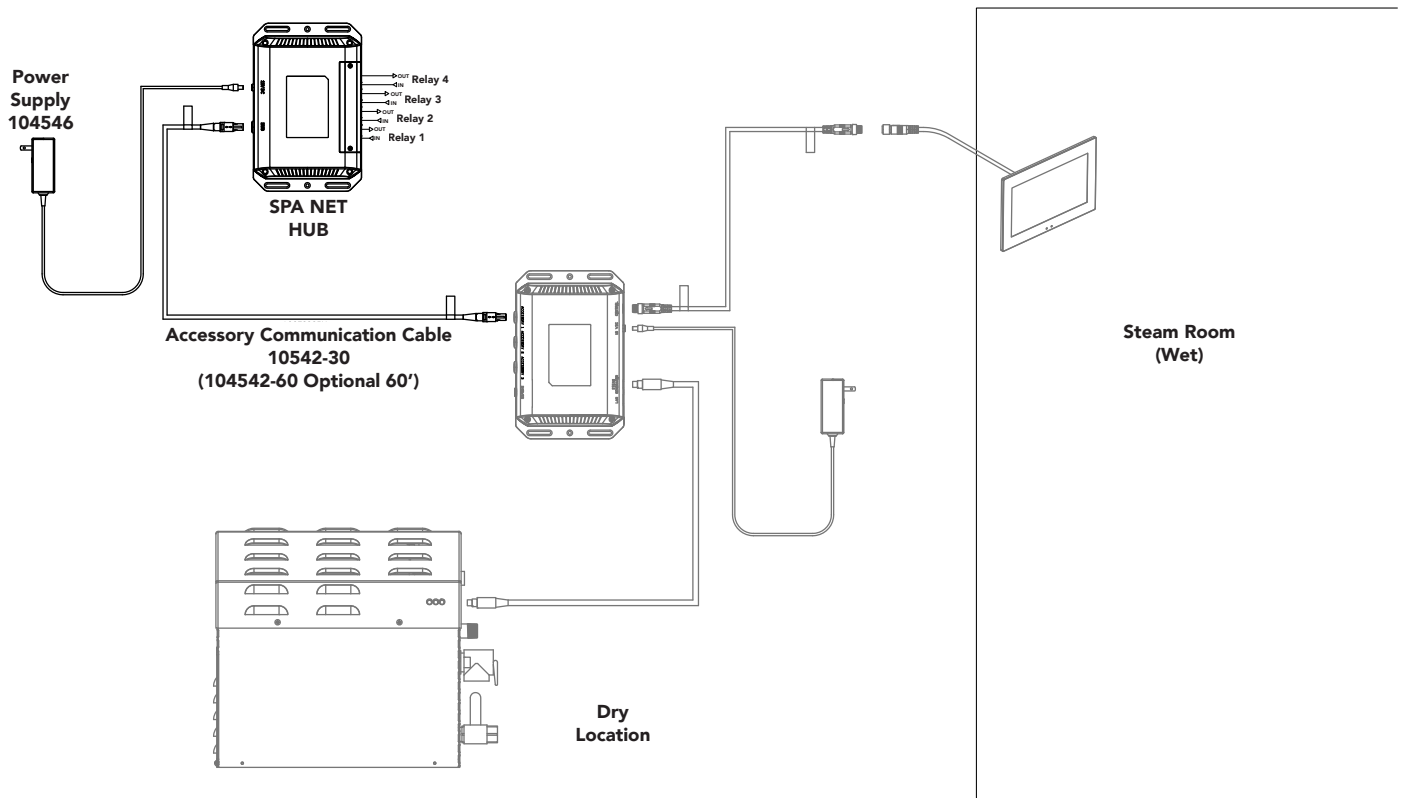

Installing the SpaNet Hub

SpaNet Hub Dimensions

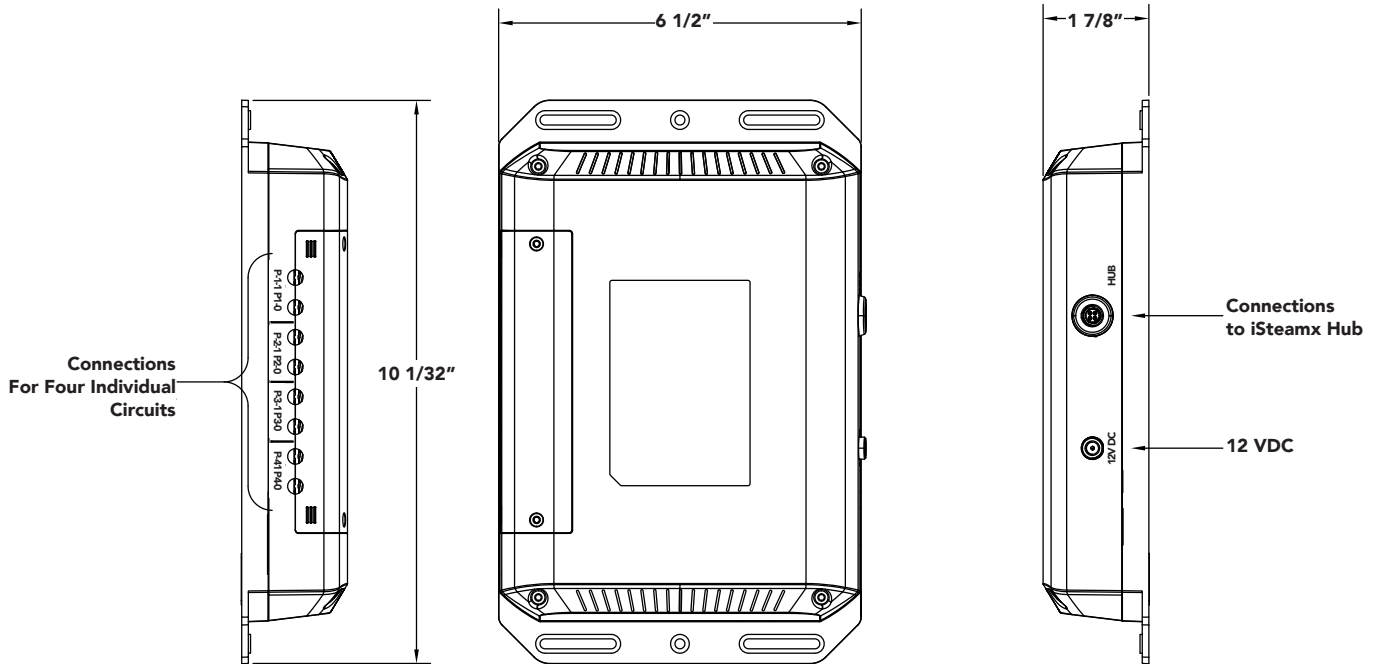

Locating the SpaNet Hub

1. Determine the desired location of the SpaNet Hub outside the steam room in a dry location

⚠ WARNING Shock Hazard. Do not place the SpaNet Hub in a location where it may get wet.

2. The included communication cable that connects the SpaNet Hub to the iSteamX hub is 30 feet long, an optional 60 foot cable (104542-60) is available, locate the SpaNet Hub accordingly

Installing the SpaNet Hub

1. Using screws affix the control box to a stable surface (i.e. a wall) using the mounting holes on either side of the SpaNet Hub.
2. SpaNet Hub can be mounted in any orientation

Wiring the SpaNet Hub

The SpaNet hub requires a 120 outlet for power

! WARNING

Shock Hazard. Turn breaker OFF or remove fuse(s) and test that the power is off before wiring SpaNet Hub.

! CAUTION


Use only copper wire with SpaNet Hub. Do not use with aluminum wire.

IMPORTANT NOTE: The 120 VAC power supply only powers the SpaNet Hub the relays are switching a voltage supplied from an outside source.

! WARNING

Each relay in the SpaNet hub is rated for a maximum of 15 amps.

1. Remove the cover off the wiring terminals on SpaNet Hub.
2. Strip ½" of insulation off the wires (#12-14 AWG).
3. Connect the HOT wire from the supply to an input terminal (i.e P1-I). Insert the stripped wire between the wire clamp and terminal. Tighten the screw to 14 lbf-in (1.6 N-m).
4. Connect the switch output for that circuit to the corresponding output terminal (i.e. If the input is on P1-I, the output must be on P1-O). Insert the stripped wire between the wire clamp and terminal. Tighten the screw to 14 lbf-in (1.6 N-m).
5. Connect output wiring to the device to be controlled by iSteamX. SpaNet hub is wired similar to and acts like a wall switch on the circuit.
6. Route the wires through the slots provided for each output as shown below.

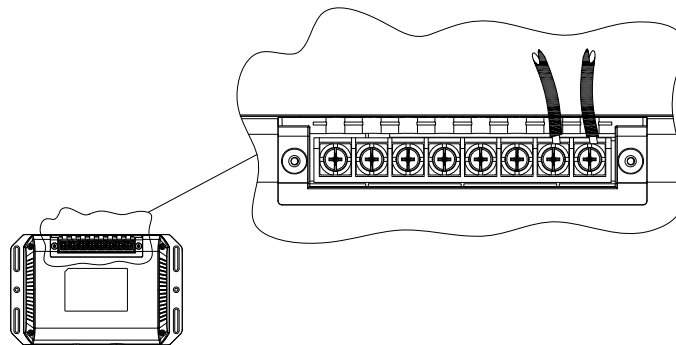

! WARNING


Shock Hazard. The cover over the wiring terminals must be in place at all times when the circuits being switched by the SpaNet hub are powered

7. Wire the output terminal to the device to be control per the manufacturer's instructions.
8. Branch circuit protection for the circuits being switched by SpaNet Hub shall be in accordance with National and local electrical codes.


Connecting SpaNet Hub to the iSteamX

IMPORTANT NOTE: Both the SpaNet HUB and iSteamX should not be powered when connecting the system.

1. Plug the accessory communication cable into the port labeled Hub on the Spa Net Hub.

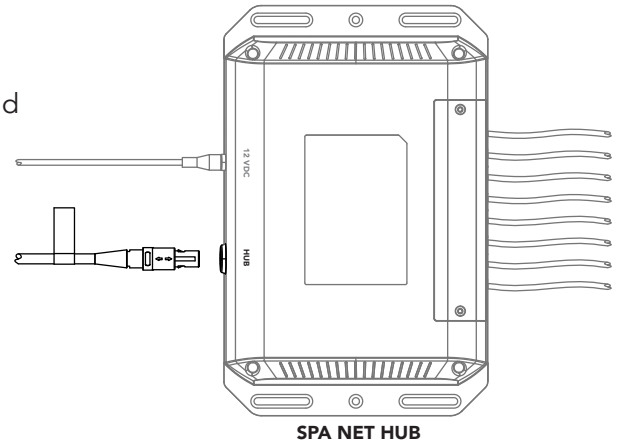

2. Plug the Free end of the accessory communication cable into any of the accessory ports on the iSteamX Hub.

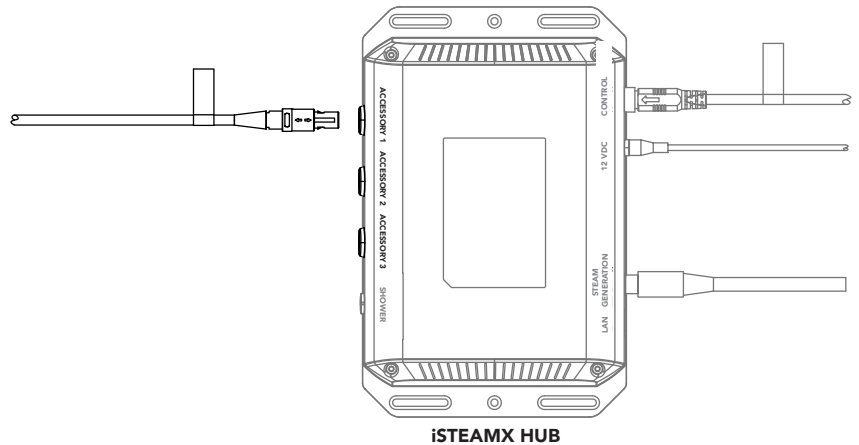


3. Apply power to the SpaNet Hub.

4. Apply power to the iSteamX.

Operating The SpaNet Hub


1. The SpaNet Hub will automatically be recognized when the iSteamX powers up.
2. The SpaNet Hub will appear as a small icon resembling the SpaNet Hub on the bottom left of the iSteamX icon tray.

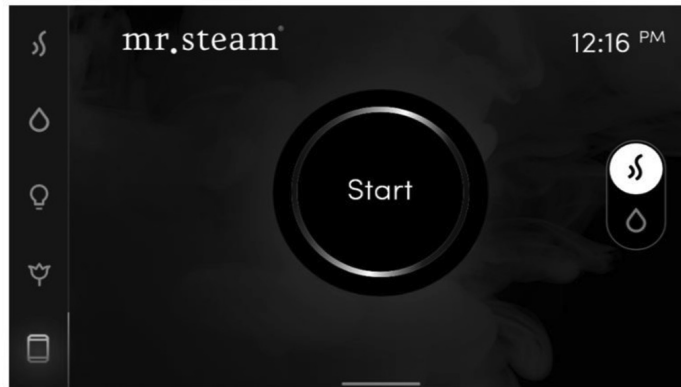

3. Tapping on the SpaNet Hub icon will take you to the SpaNet Hub interface. The SpaNet Hub's relays can be operated with the steam or shower on or off.
4. Tapping any of the buttons next to the output name will turn the relay for that output on or off. By pressing the gear icon, each output can be customized.



Operating The SpaNet Hub

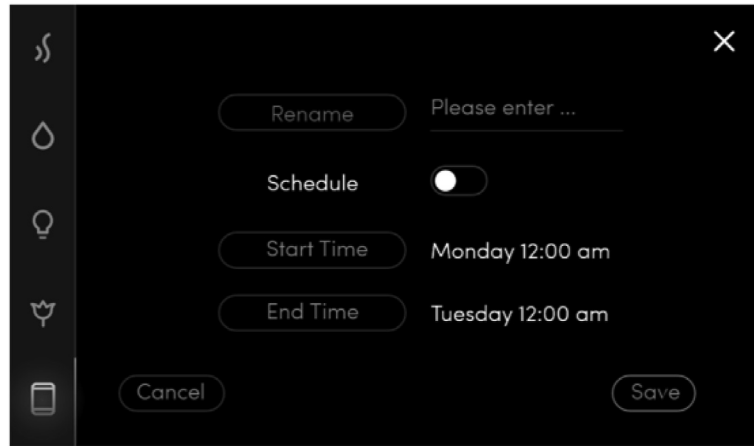

5. To name an output press the Rename button.

6. To schedule the output to turn on and off automatically, press the Start Time and End time buttons to create the schedule. Once the schedule has been created, the button next to Schedule must be pressed to run the schedule.

IMPORTANT NOTE: When an output has a schedule a clock icon will appear next to it. The output can be turned on or off manually at anytime even if a schedule has been created.

7. Press save to confirm the changes.

mr.steam[®]

Feel Good Inc.[®]

www.mrsteam.com

Products, information and specifications are subject to change without notice.

Please call Technical Support at 1.800.76.STEAM (East Coast) or 1.800.72.STEAM (West Coast) for more information.

NOTICE

The model and serial number is printed on the data plate on the front of the steam bath generator.
Have this information available when contacting Technical Service.

mr.steam[®] | hello@mrsteam.com | www.mrsteam.com

43-20 34th Street, Long Island City, NY 11101 TEL: 1 800 76 STEAM | 9410 S. La Cienega Blvd. Inglewood CA 90301 TEL: 1 800 72 STEAM

2025 © MrSteam and des., A Lifetime of Pleasure, AirTempo, AromaFlo, AudioWizard, AutoFlush, AutoSteam, Butler Package, ChromaSteam, Clean Steam... Every Time, Club Therapy, CT Day Spa, Digital 1, Express Steam, Feel Good Inc., From Bathroom to Spa, iButler, iGenie, iSpa Package, iSteam, iTempo, iTempo/Plus, Linear Steamhead, Making Wellness a Way of Life, Music Therapy, My Steam, SmartSizing, Spa Package, Steam Genie, Steam on Demand, Steam in a Box, Steam@Home, SteamStart, SteamTherapy, Tala, Tala Bath & Body, Tempo, The Intelligent Steambath, Valet Package, and Virtual Spa System are registered trademarks of MR.STEAM.

PUR 100591 REV 5.25