xButler Package

MS xBUTLER PACKAGE

For models MS90 to MSSUPER3

BOX CONTENT

- iSteam®X Touch Control
- iSteam® Steamhead
- AutoFlush®
- Condensation Pan



For models MX4, MX5 and MX6
Same as iButler Package except with a MAX
AutoFlush, MAX Condensation Pan and
additional iSteam Steamhead

NOTE: When ordered with the Linear Steamhead, standard steamhead(s) are replaced with 104480 Linear Steamhead(s).





iSteamX Mobile App



FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

Contractor:
Contractor.
Submitted By:
Date:
-

xButler Package **Technical Specifications**

Control		
iSteamX Control	TS0090	06-25
SteamHead		
(standard) AromaSteam SteamHead	TS0010	05-22
(option) Linear Steamhead	TS0085	05-23
Accessories		
Condensation Pan	TS0012	05-22
AutoFlush		
(MS & Super) MS / Super AutoFlush	TS0011	05-22
(MX) MX AutoFlush	TS0081	05-22

mr.steam® | Feel Good Inc.

iSteam®X

Box Contents:


- iSteamX
- Owner's Manual
- Control Cable (30 ft. (1m))
- Steamhead
- iSteamX Hub
- iSteamX Cable
- iSteamX Hub Power Suppy (w/Integral 5ft [1.5m] Cable)
- Tube of Silicone Sealant


iSteam controls surface mount in the steam/shower enclosure through a 1-1/4" [32mm] hole. They are suitable for use with iSteam mobile App control.

iSteam controls are suitable for use inside or outside the steam/shower enclosure, featuring:

- Full color LCD touch screen
- Programmable temperature
- Programmable time
- Eight user profiles
- Eight user presets per profile
- AromaSteam, ChromaSteam and Audio controls
- Passcode to prevent unintentional use of steam bath
- Includes AromaSteam Steamhead
- Compatible with iSteam App
- Low voltage operation
- Popular music and video apps pre loaded

Dimensional Information

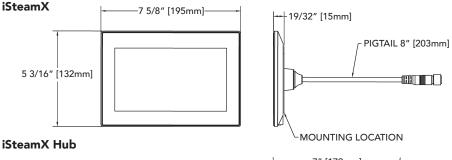

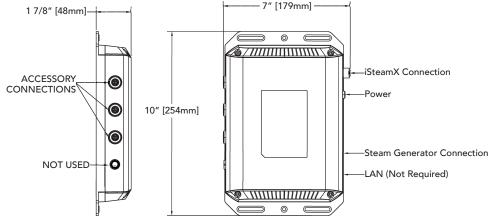

The iSteam controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 ft. (1.2 1.5m) above the floor
- In a location representative of the desired steam bathing temperatures near the bather seating area. Do not locate the control above or near the steamhead or direct steam emissions.
- On a vertical wall

The control cable and the hub cable length are 30 ft. (9m) each. Insure that the control and/or steam generator are located accordingly. An optional 60 ft. (18m) cable versions are available if required. If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.


FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH	PROJECT INFORMATION
iSteamX	BB Brushed Bronze	Location:
	BL Brilliant Black	Architect:
	BN Brushed Nickel	Alcintoct.
	MB Matte Black	Engineer:
	NB Nouveau Bronze	Contractor:
	OB Oil Rubbed Bronze	Submitted By:
	PB Polished Brass	Submitted by:
COLOR	PC Polished Chrome	Date:
WH White	PG Polished Gold	Notes:
BK Black	PN Polished Nickel	
DIA DIACK	SN Satin Nickel	
	ST Satin Steel	
	☐ WH White Finish	

AromaSteam Steamhead

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

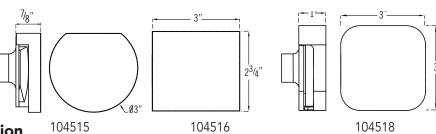

Round & Square Steamhead Installation

(3/4" NPT)


IMPORTANT: DO NOT disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.

CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead. Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938 / 10398SQ

IMPORTANT NOTE: To preserve steamhead finish, **DO NOT** use wrench or other tools to tighten. DO NOT use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

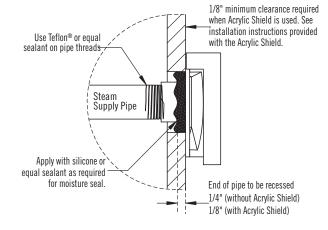

Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938/ 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH	PROJECT INFORMATION
104515	BB Brushed Bronze	Location:
104516	☐ BL Brilliant Black	Architect:
104518	BN Brushed Nickel	
	MB Matte Black	Engineer:
	NB Nouveau Bronze	Contractor:
	OB Oil Rubbed Bronze	Submitted By:
	PB Polished Brass	Date:
	PC Polished Chrome	
	PG Polished Gold	Notes:
	PN Polished Nickel	
	SB Satin Brass	
	SG Satin Gold	
	SN Satin Nickel	
	ST Satin Steel	
	☐ WH White Finish	

Linear Steam Head®

- Quiet, even distribution of steam
- No field assembly required
- Finished Look
- No moving parts
- Minimal profile
- Aroma Feature

Linear Steamhead Installation: (3/4" NPT)


IMPORTANT: Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly.


Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.


cautions


Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.


- Linear Steam Head model 104480 is suitable for MrSteam generator models MS90– 400, MSSUPER1–3 and MX4-MX6.
- Two 104480 linear steamheads must be used for models MX4, 5 & 6.
- Using model 104480 for any steam generator model larger than the MX6, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
- For residential use only.
- Install in a upright orientation only. Installation in a any other orientation may concentrate the steam and result in excessive temperatures.

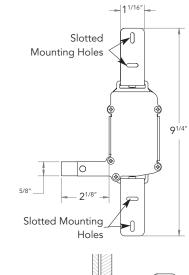

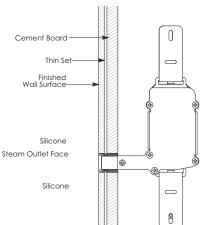

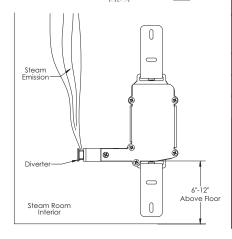

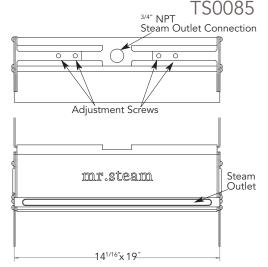

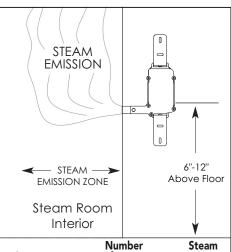

Generator Model	Number of Linear Steam Heads	Steam Emission Zone
MS90-MS400	1	18"
Super1-Super3	1	24"
MX4-MX6	2	24"

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION


visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
104480	Location:	Contractor:
□BB □BN □MB □ORB □PB □PC □PN □SB	Architect:	Submitted By:
One 104495 may be used with MX4, MX5 & MX6. See technical specification TS0088 for more information	Engineer:	Date:
Notes:		

Linear Steam Head® TS0085

Accessories

CAUTIONS because the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter, and direct steam emission are very hot, locate the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverters where incidental contact by bather or direct steam emission cannot occur.

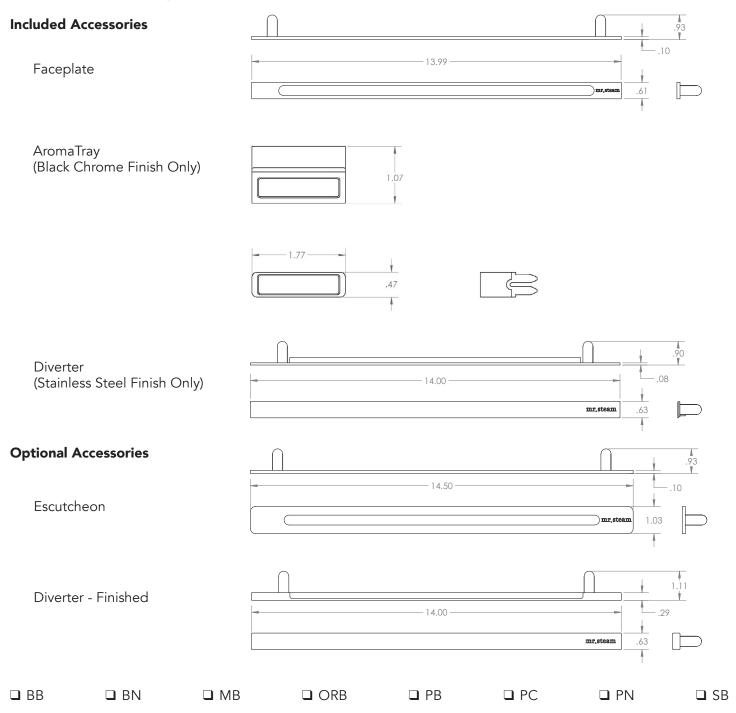

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.

SteamLinx™

BOX CONTENT

- SteamLinx Generator Module
- SteamLinx Router Module
- 6 foot Ethernet Cord
- Power Adapter

SteamLinx

Introducing the latest Mobile Steam Room Technology, the SteamLinx Mobile System. SteamLinx allows for seamless control of essential steam room functionality using your smart phone or mobile device.


Included in all Dream & Butler Packages (Except Baisc Butler).

Works will all MrSteam Controls

App available for download from Google
Play and the App Store



IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

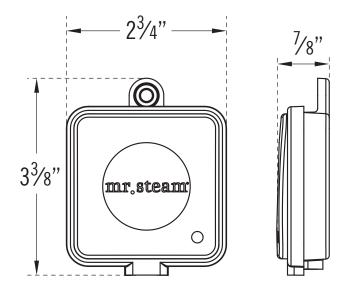



ocation:	Contractor:
	Contractor.
chitect:	Submitted By:
ngineer:	Date:
_	


Condensation Pan


103867 & 104402

Mr.Steam strongly recommends the use of a condensation pan in the unlikely event of a plumbing leak.

Locate the condensation pan on a solid level surface and place the steam generator inside the condensation pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Condensation pans drain by gravity. The condensation pan is equipped with an integral 3/4" NPT fitting.

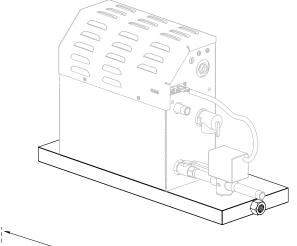

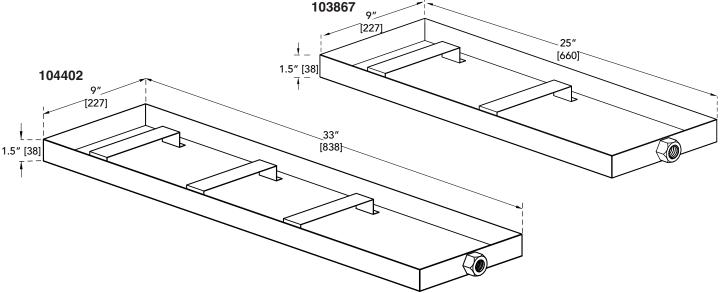

NOTE: For MX4E, MX5E and MX6E use model 104402

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
☐ 103867 ☐ 104402	Location:	Contractor:
104402	Architect:	Submitted By:
	Engineer:	Date:
Notes:		

AutoFlush®


Box Contents

- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

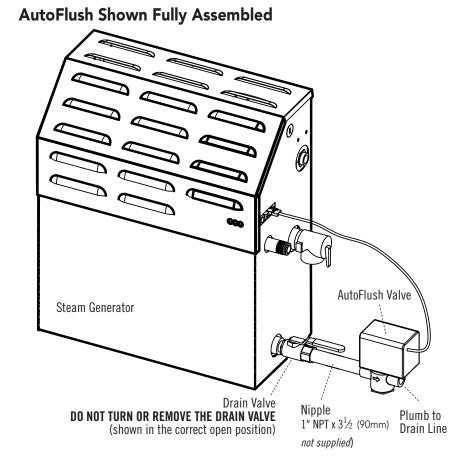

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
MS 81500E	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		

AutoFlush®

Box Contents


- AutoFlush Valve (1" NPT) with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

AutoFlush Shown Fully Assembled

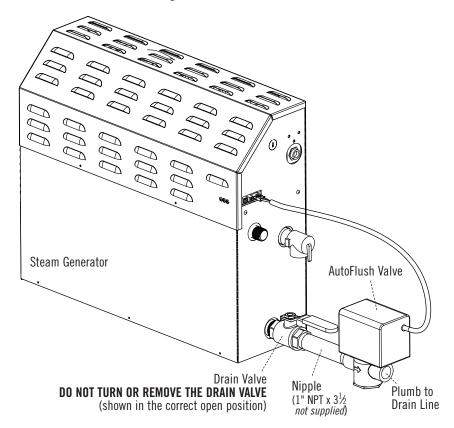

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
CT 81500	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		