
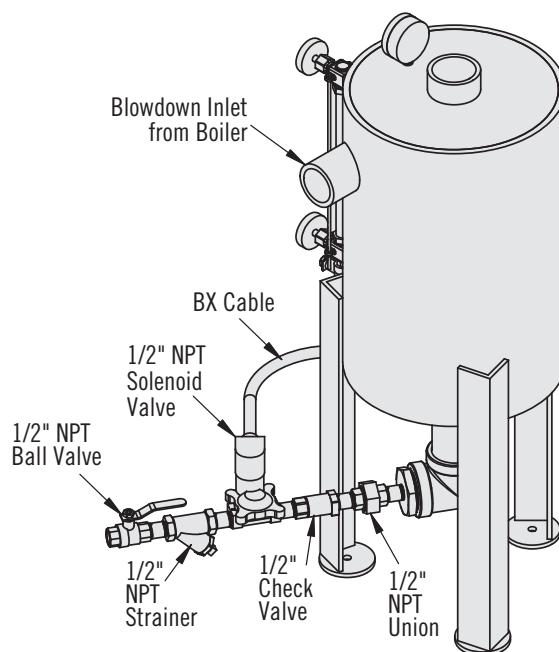
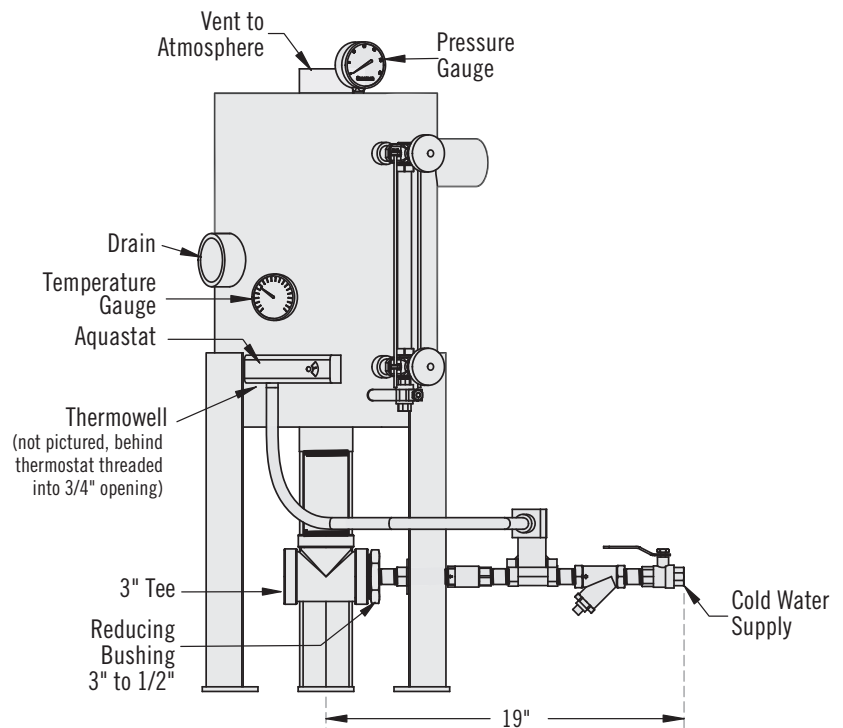


## Installation Instructions:

1. Install all piping onto drain on the bottom of the blowdown tank
2. Insert Thermowell into 3/4" opening
3. Insert Aquastat probe into Thermowell
4. Install Aquastat on Thermowell
5. Connect the solenoid valve to the Aquastat controller as seen in the wiring diagram using BX cable
6. Connect the Aquastat to 120VAC

Refer to blowdown tank instructions for plumbing connection.

## Wiring Diagram

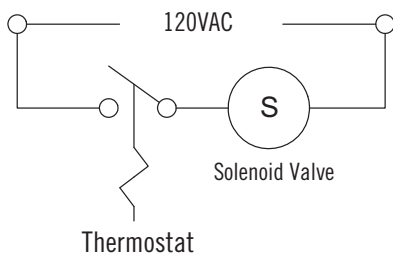

*All drawings are for illustrative purposes only.*